



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**



## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*



 
To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Keep your secrets safe with the **Secret Safe Locker** by **VTech®!** This is your super secret locker with 3 built-in compartments that are perfect for storing and protecting your treasures! Unlock the secret locker with your very own 6-digit passcode to keep your secrets safe inside. Features an alarm clock and fun games. Enjoy the built-in music or connect your music player (not included) to listen to your favourite music! Make your locker even more unique by customising it thanks to the cool stickers included!



Sticker Sheet



Reset Button  
(at the back  
of the unit)

## INCLUDED IN THIS PACKAGE

- One **Secret Safe Locker**
- One **Sticker Sheet**
- One **3.5mm Audio Cable**
- **Quick Start Guide**

 
### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

### NOTE:

Please keep this Instruction Manual as it contains important information.

### Unlock the Packaging Locks:

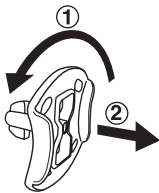

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

## GETTING STARTED

The **Secret Safe Locker** is in try me mode in the packaging. To exit try me mode, press and hold the **Reset Button** (located in the battery compartment with the word "RESET") for around 1 second. You will enter the time setting page when try me mode is unlocked.

### Notes:

The batteries included in the unit are for demo purposes only. Please replace with new battery for the best performance.

## INITIAL SET-UP

### 1. TIME SET-UP

 
 
When you first use the **Secret Safe Locker**, you will need to set the time. Press the **Left** or **Right Button** to select and then press the **Number Buttons** to input the time, press the **OK Button** to confirm.

### 2. PASSCODE SET-UP

Press the **Number Buttons** to create a 6-digit passcode, press the **OK Button** to confirm.

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

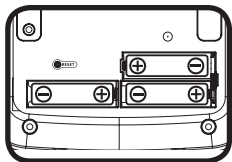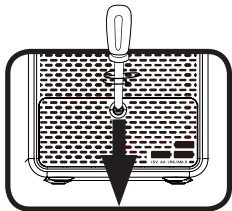

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **Disposal of batteries and product**




The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## Product Features

### 1. Home Button

Press the **Home Button** to return to the Main Menu from any function or activity.

### 2. Clock Button

Press the **Clock Button** to display the clock. And press the **Left** or **Right Button** to change the clock style.

### 3. Left/Right Button

Press the **Left** or **Right Button** to scroll through the menu options on the Main Menu and select an activity or setting.

### 4. OK Button

 
Press the **OK Button** to confirm your selection or setting.

### 5. Number Buttons

Press the **Number Buttons** to set or enter the time and password.

### 6. Unlock Button

Press the **Unlock Button** to enter the passcode to unlock and open the locker. Please close the locker door at any time to keep your locker safe.

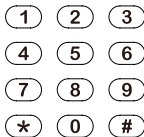

## 7. **RESET Button**

Press and hold the **Reset Button** which is located inside the battery compartment to clear all settings and restore factory settings. Then you will enter the INITIAL SET UP page to set the time and passcode.

## 8. **Audio Jack**

The **Audio Jack** is located on the back of the unit. Connect a music player (not included) to the Locker with the included 3.5mm Audio Cable. The Locker will enter Music mode automatically, ready to play the music.



## 9. **Automatic Shut-Off**

To preserve battery life, the **Secret Safe Locker** will automatically power down after several seconds without input. If the audio cable is plugged in, the screen backlight will turn off after around 1 minute without input, and will automatically power down after about 15 minutes without input. The **Secret Safe Locker** can be turned on again by pressing any button. The unit will also automatically turn off when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the batteries.

### **Note:**

If the unit repeatedly powers down while playing, please insert new batteries and try switching it on again.





# ACTIVITIES

## 1. Mystery Time Game

### 1.1 Wise Words

Press any **Number Button** to hear wise words.



### 1.2 Guess Your Lucky Number

Guess your lucky number between 1-10 by pressing the **Number Buttons**.



### 1.3 Magic Rating

Choose 3 of the 15 magic cards to hear your love, lucky, charm, smart and friendship rating. Press the **OK Button** when the card you want to choose is shown on the screen.



## 2. Challenge Game

### 2.1 Break the Code

When the correct number is in the box, press the **OK Button** to select the answer to solve the addition, subtraction or multiplication question. There are 3 difficulty levels. When you manage to unlock 5 locks you will level up automatically. Once you have unlocked a level you can choose which level you would like to play next.



### 2.2 Memory Challenge

Treasure boxes with numbers above them will appear on the screen. The numbers will then flash randomly and you need to remember the correct order. Use the **Number Buttons** to key in the numbers in the correct order to answer the question. Correctly complete a sequence 5 times within the specified time to level up. Once you have unlocked a level you can choose which level you would like to play next time.



## 2.3 ~~Treasure Collector~~



~~Collect the gems in the treasure chest by pressing the **Left** or **Right Button**. Make sure you avoid the wrong objects. Collect 15 gems in each level to win the game. Once you have unlocked a level you can choose which level you would like to play next.~~



## 3. ~~Music Mode~~



### 3.1 ~~Music Time~~



~~Select a song or melody by pressing the **Left** or **Right Button**. Press the **Number Buttons** to hear fun sounds over the top of the melodies.~~



### 3.2 ~~Your Favourite Song~~



~~Connect your music player (not included) with the included 3.5mm audio cable to listen to your own music.~~

## 4. ~~Passcode Setup~~



~~Reset the password regularly to ensure secret security.~~



## 5. ~~Time Tools~~



### 5.1 ~~Time~~



~~Enter this setting to set the time. Press the **Left** or **Right Button** to change the time settings. (The am/pm setting is only applicable in the 12-hour time format). Then press the **OK Button** to confirm and save.~~



### 5.2 ~~Alarm~~



~~Enter this setting to set an alarm. Press the **Left** or **Right Button** to:~~

- ~~Turn the alarm on or off.~~
- ~~Set the alarm time.~~
- ~~Select an alarm tune.~~



Press the **OK Button** to confirm and save the current setting. When the alarm sounds, press any button to stop it. If no button is pressed, the alarm will stop after approximately 60 seconds and enter sleep mode.

### 5.3 Timer

Enter this setting to set the timer. Press the **Left** or **Right Button** to change the time. Press the **OK Button** to confirm the timer duration, the countdown will start immediately. While the timer is running, you can press the **OK Button** to pause/resume it. When the bell rings, press any button to stop it. If no button is pressed, the ring will stop after approximately 60 seconds and enter sleep mode.



## 6. Settings

### 6.1 Volume Setting

- Press the **Left** or **Right Button** to change the volume.



### 6.2 Screen Backlight Setting

- Press the **Left** or **Right Button** to turn the backlight on or off.



### 6.3 Sticker Setting

- Customise and choose your favourite sticker to create the sixth clock face.



## SONG LYRICS

### SONG 1

This is where I keep my things,  
My special things,  
My favourite things,  
This is where I keep my things,  
So no one else can find them.

## SONG 2

My locker's where, I keep my secrets,  
It is so cool, and keeps things safe!  
My locker's where, I keep my secrets,  
It is so fun, my locker's so cool!

## SONG 3

I can make my locker great,  
Look nice, keep my things safe.  
I can make my locker cool,  
With all my special stickers!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, please install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



## ~~CONSUMER SERVICES~~

~~Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.~~

### ~~UK Customers:~~

~~Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)~~

### ~~Australian Customers:~~

~~Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)~~

### ~~NZ Customers:~~

~~Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)~~

## ~~PRODUCT WARRANTY/ CONSUMER GUARANTEES~~

### ~~UK Customers:~~

~~Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).~~

### ~~Australian Customers:~~

~~VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED—  
CONSUMER GUARANTEES~~

~~Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.~~

~~Visit our website for more  
information about our products,  
downloads, resources and more.~~

~~[www.vtech.co.uk](http://www.vtech.co.uk)  
[www.vtech.com.au](http://www.vtech.com.au)~~

